

Detail


# EcoStud Flanged Furring Channel Spray Foam

1/2" = 1' - 0"

Drawing # 10-3700

Date: 08-23-10

Rev: 2

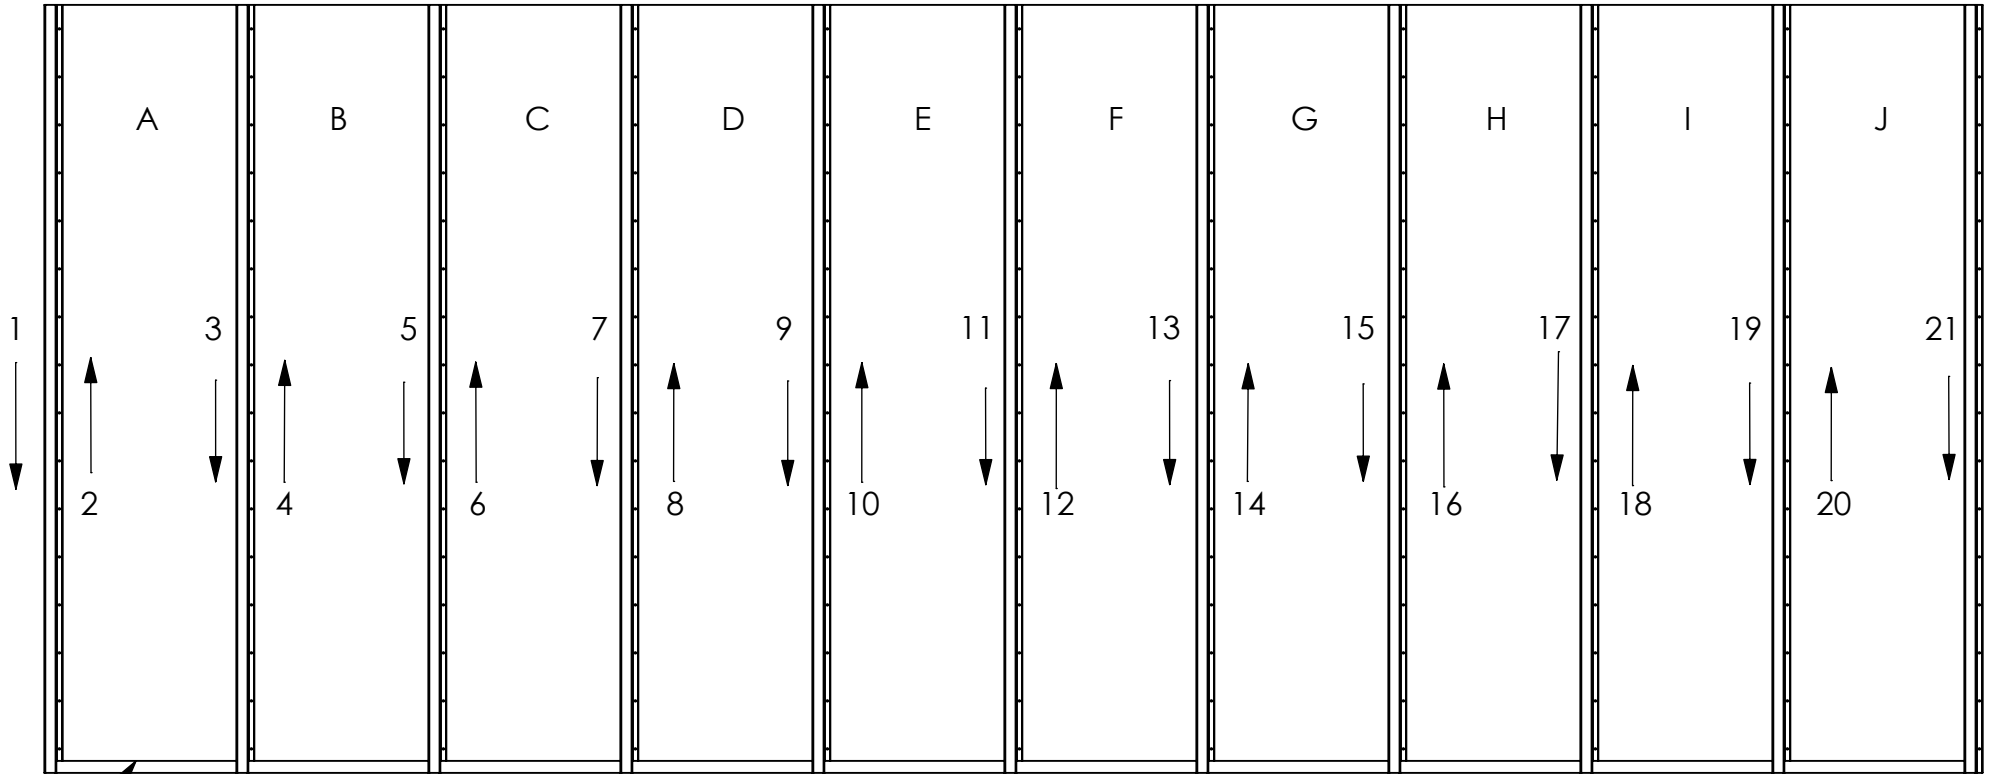

1.) Spray base of wall behind 2' x 2' strip of foam (detail # 10-3698) with 2lb density closed cell foam. Work 15' - 20' of wall at a time.

2.) Anchor each EcoStud by spraying a 1'' - 2'' fillet of foam on both sides of each EcoStud in order depicted by the number sequence. \* Hold in electrical boxes to keep expanding foam from deflecting.

3.) Spray foam in 1'' lifts between anchored EcoStuds working 15' - 20' of wall per lift. Spray cavities in order A-J; repeat until required thickness is achieved.

4.) Integrate rim joist after first lift if needed.