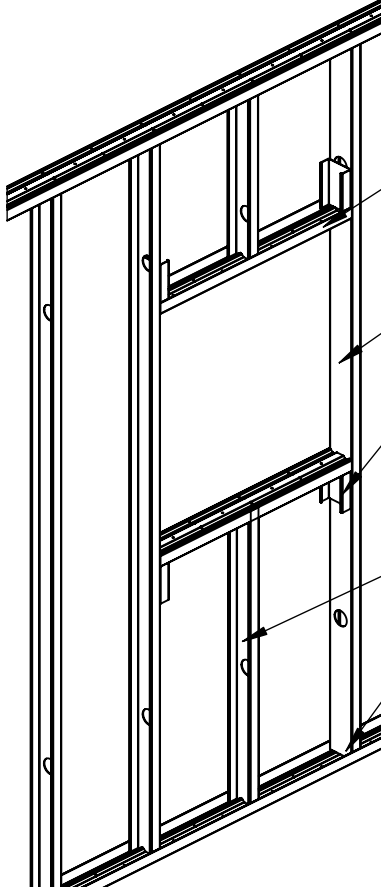


Detail	EcoStud Track and Stud System Window Openings		
1/2" = 1' - 0"	Drawing # 10-3705	Date: 12-9-11	Rev: 2
 <p data-bbox="1108 641 1591 722">Cut track to rough opening size, making sure to keep slot layout even with top and bottom track</p> <p data-bbox="1108 787 1512 836">Position studs with the flat face towards the opening</p> <p data-bbox="1108 901 1543 982">Use scrap studs at least 4" long to secure ledger and lintel, attach with 1/2" needle point screws</p> <p data-bbox="1108 1031 1554 1112">Add cripples above and below window in the appropriate slots to maintain layout</p> <p data-bbox="1108 1153 1585 1282">If window layout does not land in a pre-punched slot, cut 3/4" off the stud so it sits on top of the rails in the track. Attach with 1/2" needle point screws</p>			