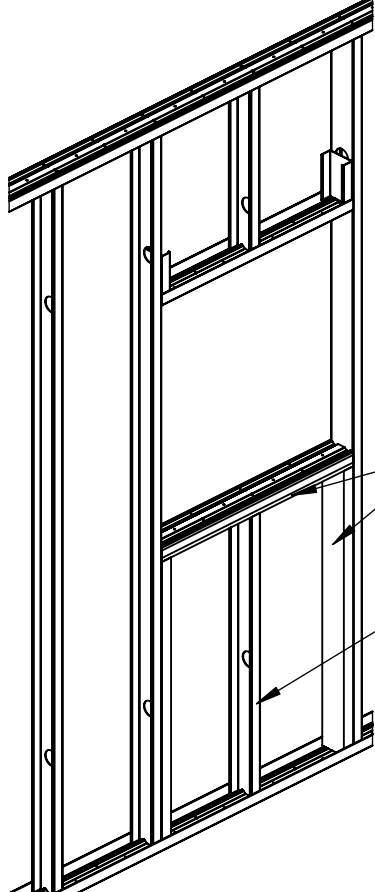


Detail	<b>EcoStud Track and Stud System</b> Egress Window Detail		
1/2" = 1' - 0"	Drawing # 10-3707	Date: 12-9-11	Rev: 1
 <p data-bbox="1234 565 1606 649">Refer to drawing #10-3705 for further details on window openings</p> <p data-bbox="1234 906 1621 961">Add wood 2x4's below egress windows for added strength</p> <p data-bbox="1234 1047 1617 1123">For windows wider than 24" use wood cripples in place of EcoStuds</p>			