
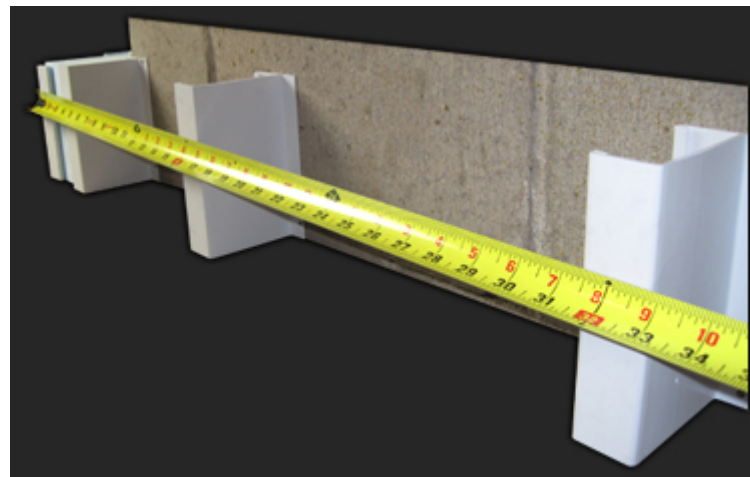


Wall Layout (16" on center)


Start on a corner and work away from it. Install the first EcoStud so the center lands at 16" as shown

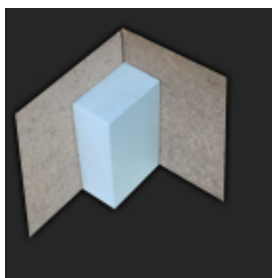


The next EcoStud should land on 32" and so on

Inside Corner


Glue first 2" x 3.5" foam board into corner

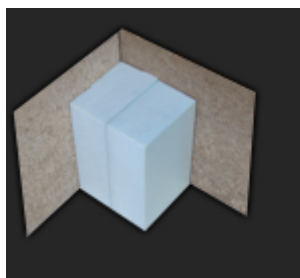

Glue second 2" x 3.5" foam board

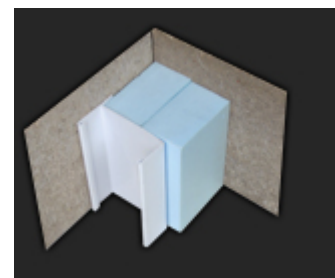

Glue and screw first 3.5" EcoStud

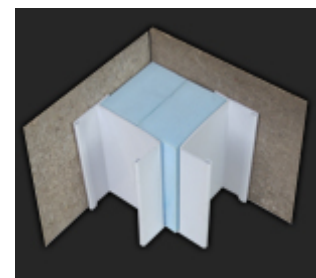

Glue and screw second 3.5" EcoStud

Materials Needed:

- (2) 3.5" EcoStuds
- (2) 2" x 3.5" Foam Board

Additional Instructions:


[Inside Corner Video](#)

[Inside Corner \(PDF\)](#)

Outside Corner



Tape two EcoStuds together for alignment, before installing on corner

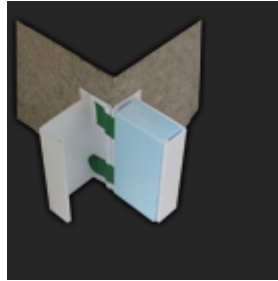

Install 1.5"x3" foam board



Install 1.5" x 5 5/8" foam board



Install second 1.5" x 5 5/8" foam board




Glue on corner bead and then tape corner to maintain alignment while glue dries

Corner Bead



Cut EcoStud on the red lines shown

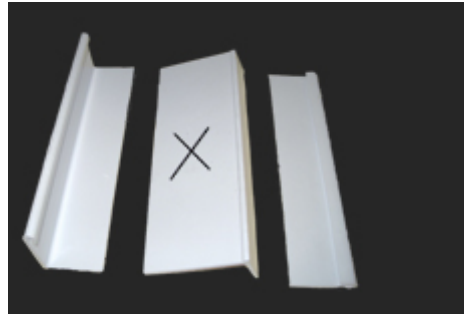

Discard the middle piece and use the left and right pieces



Mate the two pieces together with glue


Materials Needed:

- (2) 3.5" EcoStuds
- (1) 3.5" EcoStud to make corner bead
- (2) 1.5" x 4 5/8" Foam Board
- (1) 1.5" x 3" Foam Board

Additional Instructions:

- [Outside Corner Video](#)
- [Outside Corner \(PDF\)](#)

Window Detail

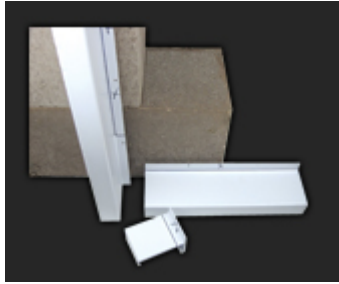


Remove nailing flanges were they will interfere with the window opening.
Cut an "L" bracket out of scrap for attaching EcoStuds together



EcoStuds as cut



Attach "L" Bracket to verticle EcoStud

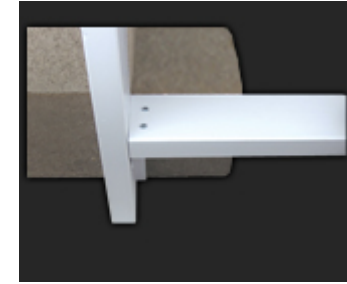

Attach ledger board to "L" bracket

Materials Needed:

- 3.5" EcoStuds to surround the perimeter of the window
- (1) 3.5" EcoStud to make corner bead
- (2) 1.5" x 4 5/8" Foam Board
- (1) 1.5" x 3" Foam Board


Additional Instructions:

- [Window Detail Video](#)
- [Window Detail \(PDF\)](#)

Base Treatment



Install all EcoStuds

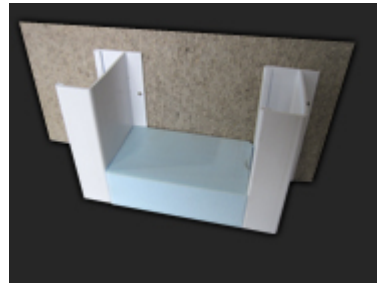

Install 2" x 3.5" foam board inside each EcoStud cavity

Materials Needed:

- (1 per cavity) 2" x 3.5" x width of cavity; foam board

Additional Instructions:

- [Base Treatment Video](#)