Detail	**EcoStud Track and Stud System** Door Openings		
½" = 1' - 0"	Drawing # 10-3708	Date: 12-09-11	Rev: 1

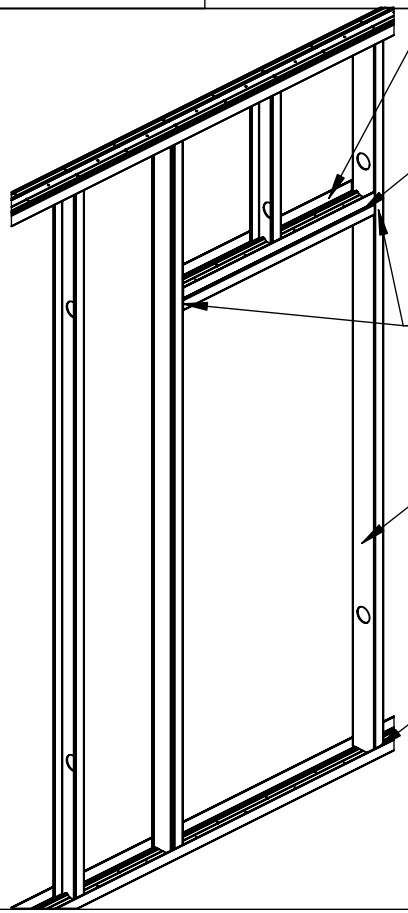

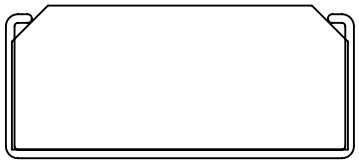

Studs around door openings:
Add a minimum 3/8" chamfer to a wood 2x4 and slide it into an EcoStud as shown above.

This allows the wall assembly to remain at 3 5/8" around the opening.